



## Low Lubricant Reservoir Sensor

**T**he Low Lubricant Reservoir Sensor monitors the fluid level in the lubricant reservoir. When the lubricant level falls below the sensor, the ASP shuts down and a red light on the top of the control box signals the operator to refill the reservoir.



**Automated Industrial Systems Inc.**

4238 W. 12th Street • Erie, PA 16505

Phone: (814) 838-2270 • Fax: (814) 833-5661 • E-mail: [info@asporing.com](mailto:info@asporing.com) • website: [www.asporing.com](http://www.asporing.com)